

# INSTALLATION INSTRUCTIONS FOR MODEL 210 HIDE-A-BOARD

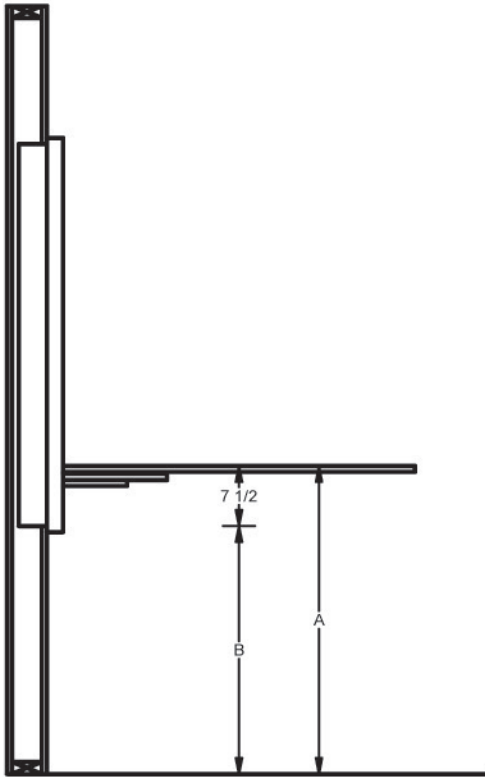


FIGURE 1

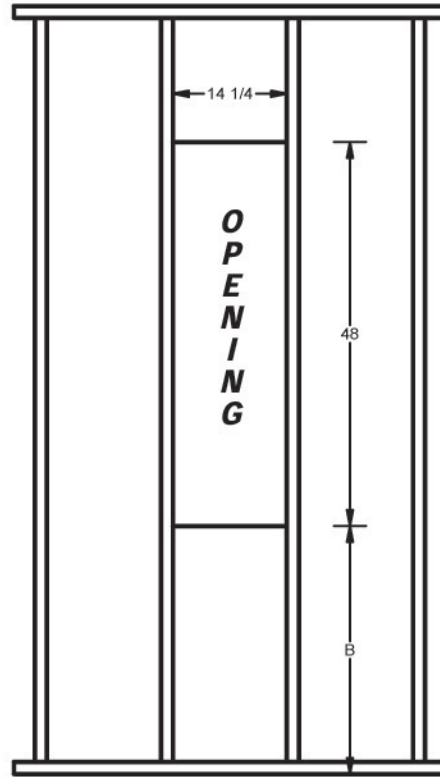


FIGURE 2

1. ESTABLISH THE BOTTOM OF THE OPENING AS SHOWN IN FIGURE 1 BY THE FOLLOWING CHART

2. CUT THE OPENING BETWEEN STUDS AS SHOWN IN FIGURE 2.

<b>DESIRED BOARD HEIGHT</b>	<b>BOTTOM OF OPENING</b>
<b>A</b>	<b>B</b>
<b>38"</b>	<b>30 1/2"</b>
<b>36"</b>	<b>28 1/2"</b>
<b>34"</b>	<b>26 1/2"</b>
<b>32"</b>	<b>24 1/2"</b>

3. SHIM SIDES OF CABINET AND ATTACH UNIT TO STUDS WITH FOUR 1/12" SCREWS THROUGH THE SIDES OF THE CABINET 12" FROM THE TOP AND BOTTOM

4. INSTALL DOOR WITH THE DESIRED SWING WITH THE HINGES PROVIDED

5. FINISH WITH PAINT OR STAIN TO FIT YOUR DECOR.

**WIRING OF OPTIONAL #21 ELECTRICAL PACKAGE IS TO BE DONE ONLY BY A LICENSED ELECTRICIAN. THE 120 VOLT WIRING SHOULD ENTER CABINET IN THE UPPER LEFT HAND SIDE.**